

# Wireless Controller for P4

 
Product Manual(4020)

## Specifications:

1. This product able to support P4, P3, IOS 13.0 or above and PC.
2. Using the BT to connect between the device and the gamepad. Ensure to provide a reliable signal (within 8 meters)
3. Built-in LED light button be provide with backlight function
4. Built-in left and right asymmetric motors, supporting dual motors and dual vibration functions.
5. Built-in 3D acceleration sensor and gyroscope sensor, with six-axis sensing function.
6. Equipped with speakers and 3.5mm headset jack, which able to output game audio signals through the handle's speakers and headphones.
7. The structure accords with ergonomics and feels comfortable.
8. Gamepad without any motion will go to sleeping mode in 15 mins, the gamepad signal light will turn off.
9. Support dual-point capacitive sensing touchpad.
10. PC USB online upgrade product program, to support the latest upgrade system of P4 console. It can avoid the console upgrade system issue.
- 11.The light bar will switch the color(blue, green and red) while the users reconnected.
12. Power on with simulation engine sound and vibration effect.
13. Keep pressing “ Home ” to turn off the controller.
14. Button backlight on/off, press “ Share ” button +Ⓢ button to switch (work in wireless mode)

★ Due to the official game platform software upgrade or source code changes and other not resist factors cause of some games can not be played or connected with our gamepad. Our company has no responsibility, we reserves the right of final interpretation for this.

## Button Illustration:

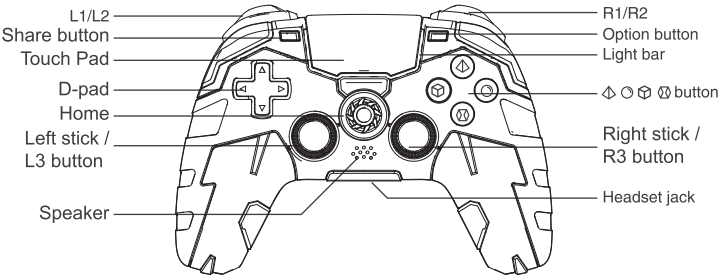

## Specifications:

1. Voltage: DC5V
2. Battery capacity: 600mAh
3. Static current: <15uA
4. Charging hours: ~3 hours
5. BT5.0, Transmission distance: ≤8M
6. Standby time : 30 days after fully charged

## How to use

### Connect P4

1. Turn on the P4 console, using the Type-C USB cable to connect between P4 console and gamepad.
2. Press "Home" button to connect. Once they connected, the light bar will be always on. Then unplug the USB cable.
3. The light bar will identify each user, the console will automatically pair each gamepad.  
1P: Blue | 2P: Red | 3P: Green | 4P: Pink
4. Six-Axis correction  
Turn off the gamepad, press the "Option" button and "Home" button at the same time. When the light bar turn red, then press "Option" button. Once the light bar form red to green and blue, the correction has been done (place the gamepad on the table during the correction )
5. Button backlight on/off, press "Share" button +Ⓢ button to switch (work in wireless mode)
6. Press "Home" button for 10 sec to turn off the gamepad

### Connect P3/PC

 
1. PC wired mode : Using the Type-C USB cable to connect between gamepad and console usb port. Once the light bar turn green, the gamepad will default as X-360 ver. Press "Home" button to switch P3 and X-360 ver.
2. P3 wired mode: Turn on P3 console, using the Type-C USB cable to connect between P3 console and gamepad. Once they connected, the light bar will turn blue. Unplug the Type-C USB cable and press "Home" can switch as wireless mode. During the Home page and press"Home"will displayed the number of the players, keep pressing "Home" pop up the option menu (turn off the console/ turn off the controller)
3. P3/PC do not support 6-axis. Connect and play with out any drivers.

### IOS MFI Game Mode:

1. Pairing step : Turn off the gamepad, press"Share" + "Home" button to turn on the gamepad to pairing mode. The light bar will flash blue and the speaker emit a sound same as motor vibrates.
2. In the IOS BT list, find and click "DUALSHOC 4 Wireless Controller" to pair. Once the pairing is successful, the blue light is always on.
3. When pairing successful, you can play MFI-certified games.
4. When the gamepad is off or in sleeping mode, press the "Home" button to connect it back, and the light bar will guide display blue, green and red in cycle. Once the controller connected, the light will always on.

## Programming Function

1. Four programming key on the back of the controller can be set according to your habits.
2. Each programming key can be mapped to a single action key or multiple keys.
3. Setting Method: Press and hold the programming key to be set and "OPTIONS" key for 3 seconds at the same time, the guide light starts to flash blue, red and green and release the keys to enter the setting mode.
4. Press one or multiple function keys to be copied (Ⓢ Ⓣ Ⓡ Ⓜ / L1/ L2/ R1/ R2/ up/ down/ left/ right)
5. Press programming key again to exit, complete the setting, and the guide light restores to the state before the setting
6. CLEAR programming setting: Press and hold the programming key to be cleared and "OPTIONS" key for 3 seconds at the same time, the guide light starts to flash blue, red and green and release the keys to clear last setting.
7. The programming button has no TURBO function.
8. RESET to default settings: Press and hold 4 programming keys and "OPTIONS" key for 3 seconds at the same time, when the guide light starts to flash blue, red and green release keys, and lights will turn on, complete reset to default settings;

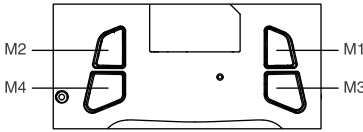

## Charging Status:

1. Low battery : When the battery voltage getting down, the light bar will keep flashing to remind you to charge the controller.
2. Charging instruction : When the gamepad is off, plug the Type-C USB cable to charge the gamepad. During the charging mode, the light bar will turn yellow. Once it finished, the light bar will turn off.

 
## Note:

1. Please do not store this product in wet or high-temperature areas.
2. Don't knap, beat, drub, pierce, or try to decompose this product, to avoid unnecessary damage to the product.
3. There are in-built battery, please do not throw the controller as rubbish
4. Please keep away the fire or heating area while charging the controller
5. Non professional personnel should not disassemble the product, otherwise it will not be covered in the after-sales warranty service.
6. Due to the official game platform software upgrade or source code changes and other not resist factors caused of some games can not be played or connected with our gamepad. Our company has no responsibility, we reserves the right of final interpretation for this.

## Accessories List:



Wireless gamepad x 1



User Manual x 1



Type-C cable x 1